



VM-202

VM-202Kit & VM-202Kit-ACS
(7"monitor&10"monitor)

2-wire IP VIDEO INTERCOM KIT User Manual



Door station for
VM-202Kit-ACS



Monitor
VM-202/VM-202-10W



Door station for
VM-202Kit



PROTECTING PEOPLE, PROTECTING PLACES

AUSTRALIA - 1800 284 339 NEW ZEALAND - 0800 262 842



SAFETY INSTRUCTIONS



Warning

- ※ Read these instructions and keep them in a safe place for future reference.
- ※ Please refer all work related to the installation of this product to qualified service personnel or system technician.
- ※ Do not operate the appliance beyond its specified temperature, humidity or power source ratings.
- ※ Securely install the devices on vertical surfaces (solid walls/doors) not prone to vibration or impact.
- ※ Install the devices away from heat sources such as radiators, heat registers and stoves.
- ※ Handle the appliance with care. Do not strike or shake, as this may damage the device.
- ※ The outdoor station, should be fitted with an approved weather shield if the chosen position is in direct sunlight, or in contact with rain, snow or irrigation sprinkler systems.
- ※ Do not use strong or abrasive detergents when cleaning the appliance body. When the dirt is hard to remove, use a mild detergent and wipe gently.
- ※ Do not overload outlets and extension cords as this may result in a risk of fire or electric shock. Distributing, copying, disassembling, reverse compiling, reverse engineering, and also exporting in violation of export laws of the software provided with this product, is expressly prohibited.

Packing List

Indoor monitor Outdoor station Bracket Power supply Manual



IC cards Plastic Anchor Spanner 2/3/4/8 PIN cables



Function Description


Indoor monitor	
Screen	7"/10" TFT LCD screen
Display Resolution	7"/10" (1024*600)
Video decoding	H.264
Intercom Mode	Two-way intercom
Power Consumption	Standby mode ≤ 2W, working mode ≤ 5.5W
Power supply	BUS power DC24V (DC48V for optional)
Operating Temperature	0 ~ +50°C
Installation	Surface mount
Memory	Memory: itself can save 100 pictures (32K), TF card storage pictures/videos (15s), support for up to 512G TF memory cards
Motion Detection	Human detection
System Capacity	1~6 indoor monitors + 1~2 outdoor stations
Functions	Unlock/Monitor/Intercom/Remote control/Record
Advantages	Clock / Voice Message/Tuya Smart intercom
Weather	Network synchronization of weather information
Video surveillance IPC	Via wired connection and Wi-Fi connection
Wiring	2Wire
Network connections	2.4G Wi-Fi

Outdoor station	
Camera	1/2.9 inch CMOS camera
Definition	1080P (1920*1080)
View angle	150° for VM-202ACS & 110° for Vm-202 Door station
Leds for night	IR-light
Day / Night	IR-Cut built-in
Power consumption	Maximum 300mA
Power supply	Supplied from indoor monitor
Operating Temperature	-20°C ~ +60°C
Installation	Surface mount
Access control	IC card 13.56MHz / APP remote
Supported locks	Current lock, NO / NC lock
Outdoor station capacity	100 IC cards; password: 100 groups




Overview


Indoor monitor front panel

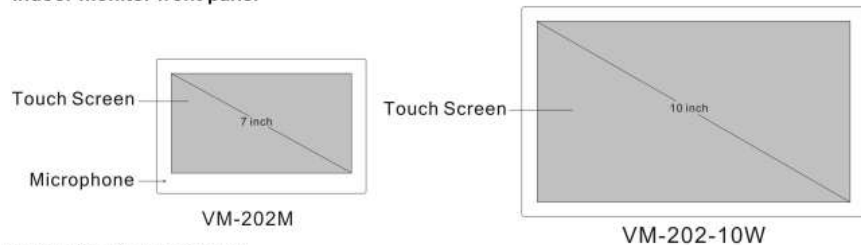

Indoor monitor rear panel

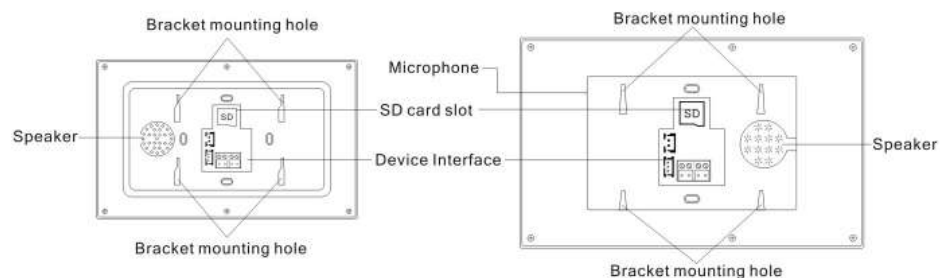


Outdoor station

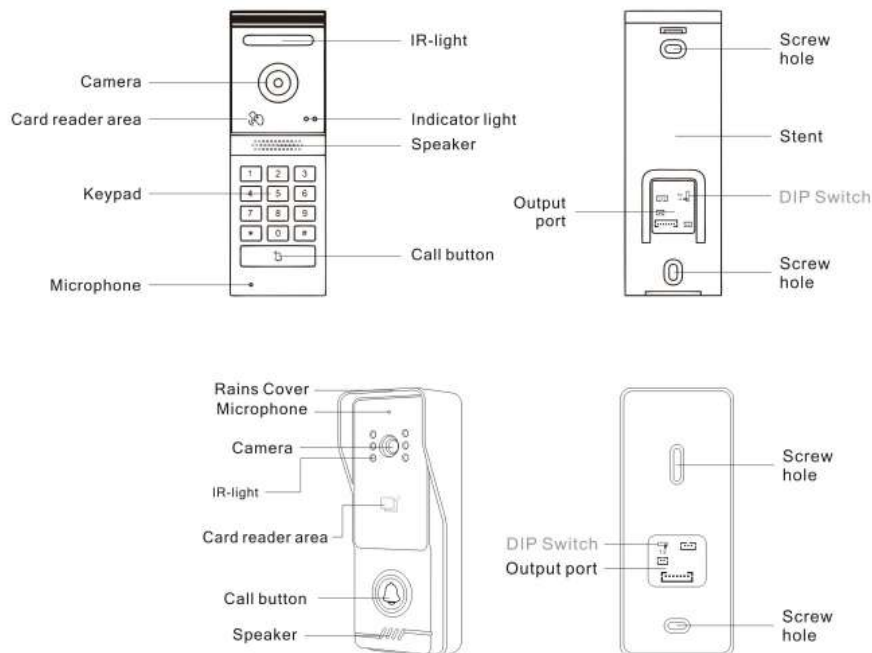

Installation


How to install the indoor monitor

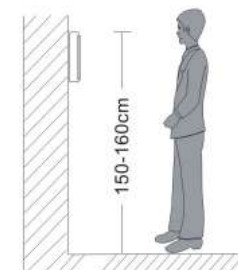


Note:

- * Please be far from the devices with intense radiation: TV, DVR, etc.
- * Do not disassemble privately to avoid the electric shock.
- * Do not drop, shake or knock the device, otherwise will damage the elements.
- * Choose the best position to install.
- * Please turn off the power before installing.

- * Keep at a distance of more than 30cm with AC power to avoid interference.
- * Keep away from the water, magnetic field and chemicals.

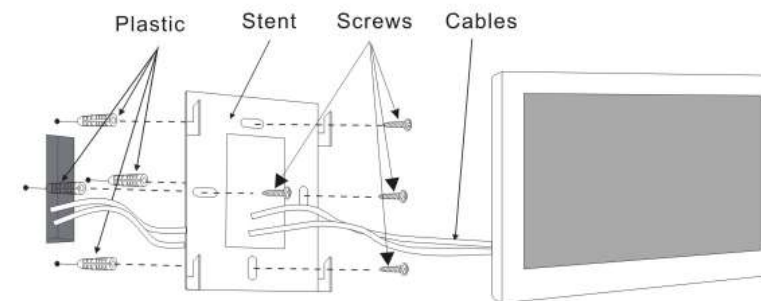

How to install the outdoor doorbell

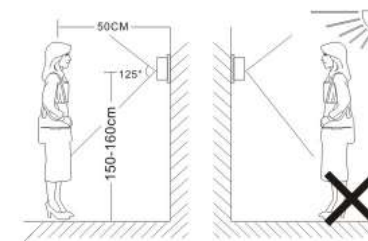

Do not expose the outdoor station to bright light or sun.

* Do not install the outdoor station in the environment, e.g. direct sunlight, high temperature, high humidity, full of dust and corrosive chemicals.

* Select the most suitable position where the camera is at user's eye level.

- * Avoid installing the device near intense radiation, e.g. AC motor and elevator.
- * Maintenance must be carried out by a qualified technician.
- * Avoid strong shocks and collisions, otherwise the exact internal components may be damaged.
- * Please turn off the power supply before installation.
- * Please maintain a distance of more than 30 cm from the AC power source to avoid external interference.
- * Keep it away from water and magnetic field.



Note on Wiring Connection

-  The power supply for electric lock is not included in the package, user can purchase according to actual requirement.
-  In the standard delivery the system supports locks with NO (Normally Open) and NC (Normally Close) unlocking method.
NO mode means that in the normal state the dry contact is opened so the lock is kept under constant closed state. If the unlocking push - button is pressed and the dry contact is changed to closed, then the lock is released.
NC mode means that in the normal state the dry contact is closed so the lock is kept under constant opened state. If the unlocking push - button is pressed and the dry contact is changed to opened, then the lock is released.
-  Please first pull out the switching power supply of the device before installation.
-  Please note the silk printing marked on PCB in order to avoid incorrect connection. The wiring connection requirement(The actual effect and the quality of wire rod has the very big relations):

1. 2-core ordinary non-STP wiring cable;
Note: Please use two separate 2-core ordinary non-STP wiring cables when installing for 2-family.

- Transmission $\leq 100\text{m}$ (about 328.08 feet) ($<0.5\text{mm}^2$)
- Transmission about 200m (about 656.16 feet) ($>0.5\text{mm}^2$)


- 2. CAT5 or CAT6 network cable (4 twisted pairs);**
Note: Please use one pair (2 wires) that have already been twisted for one monitor, and do not randomly draw two wire combinations, otherwise it may cause video signal interference and loss.

- Transmission ≤ 100m (about 328.08 feet) (<0.5mm²)


- 3. 4C ordinary unshielded wire and shielded wire.**
Note: It can be used for one-family wiring, but two separate wires are required for two-family wiring.

- Transmission ≤ 28 m (4×0.2 mm²) ● Transmission ≤ 50 m (4×0.3 mm²)

1-family

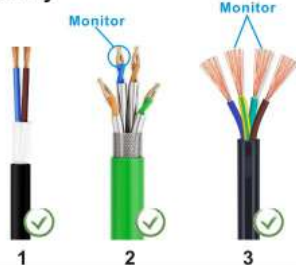

2-family

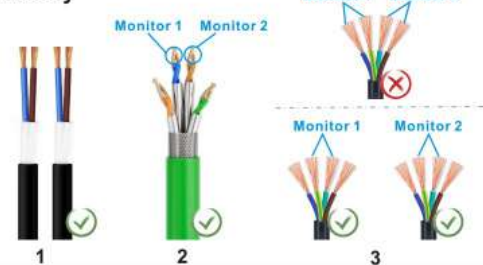

- **Note on doorlock's connection**

The electric locks are usually divided into NC lock and NO lock, their wiring is different.



Note:

1. The doorbell can support door locks within 30V.
2. Door lock's power supply depends on its door lock, if the door lock is 12V, the corresponding power supply is 12V, etc.
3. Make sure the input voltage from the monitor to the outdoor doorbell must reach 11V when unlocking.

System Topology

Topology Diagram 1

1 outdoor station+ 1 indoor monitor

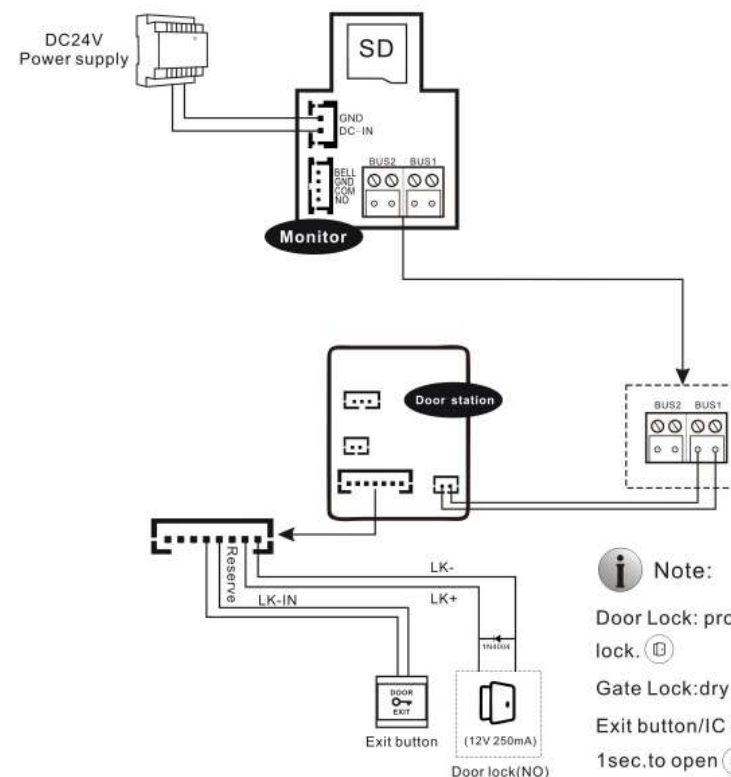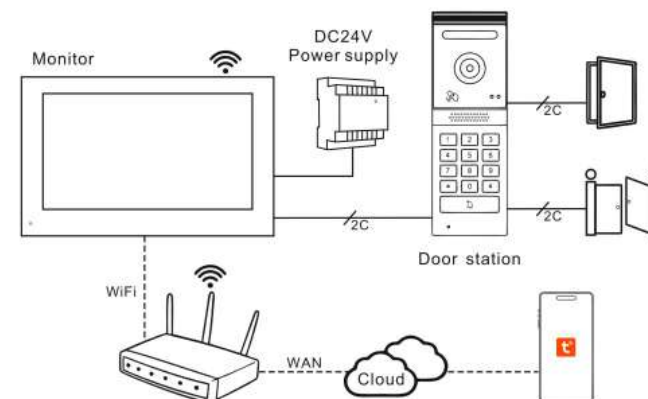



- Note:**
- Door Lock: provides power for lock.
- Gate Lock: dry contact.
- Exit button/IC card:
1sec.to open
5sec.to open



Topology Diagram 2



1 outdoor station+ 4 indoor monitor

VM-DC 24V-2A
(Dc power supply)
Sold separately

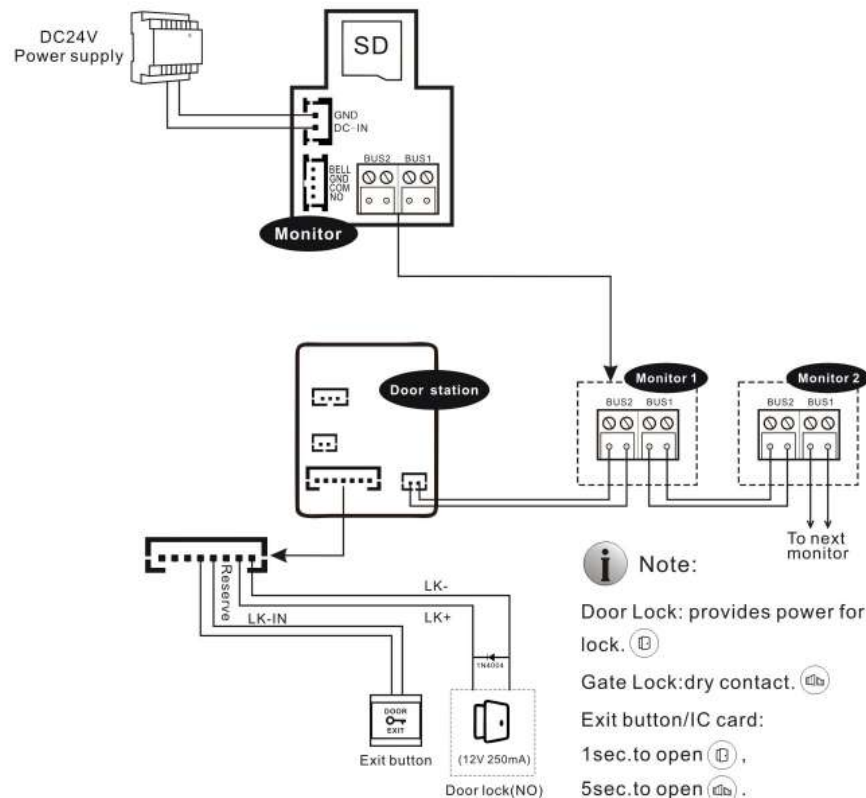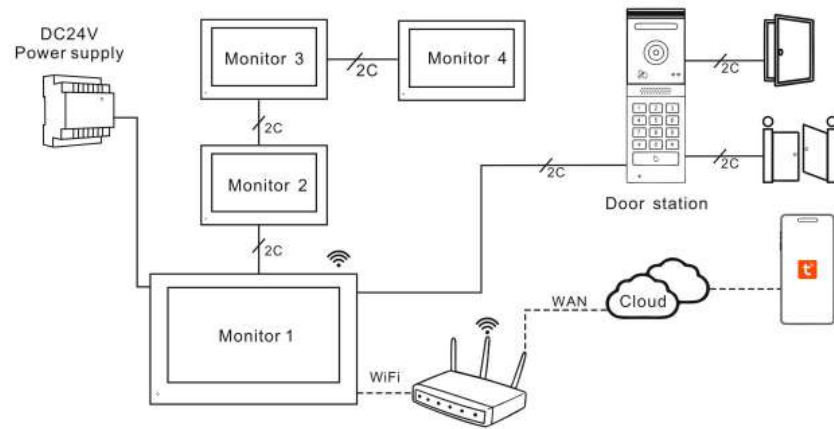

Topology Diagram 3

2 outdoor station+ 4 indoor monitor

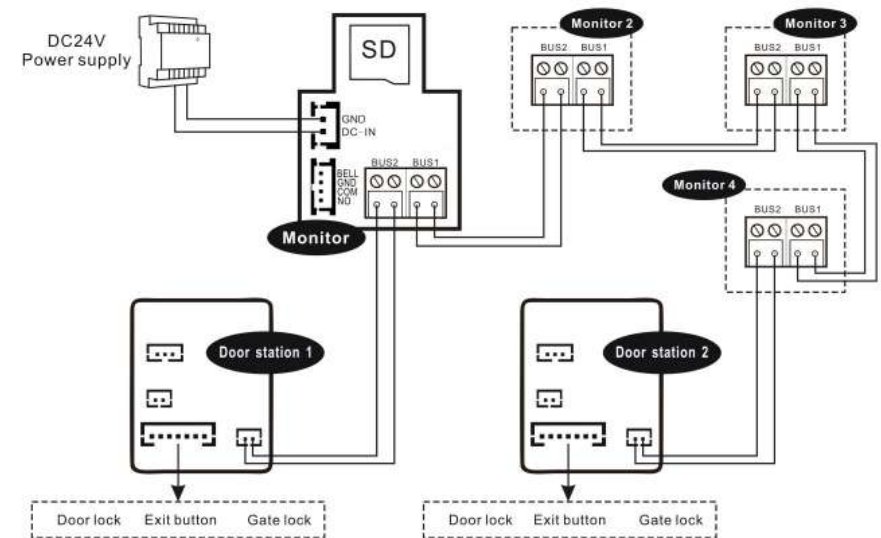
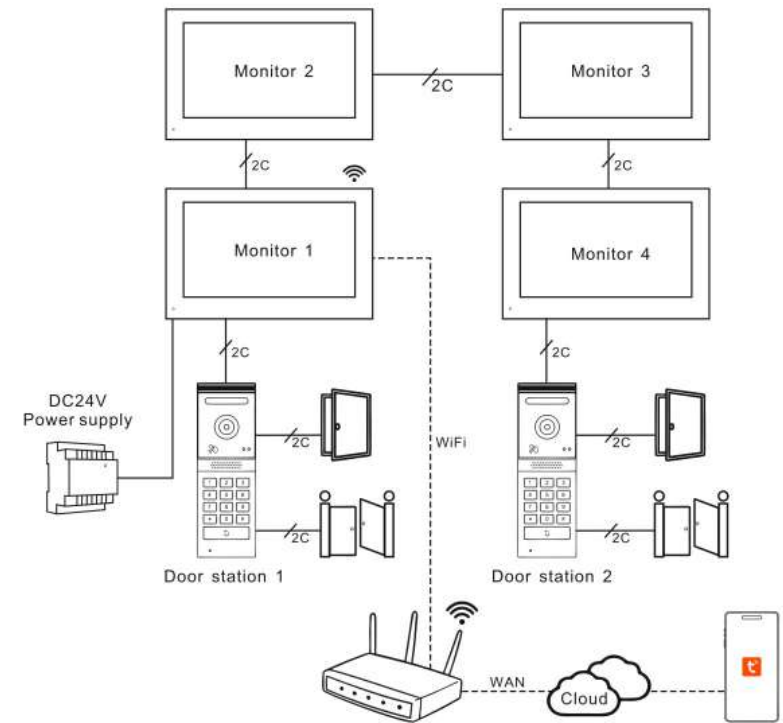


Topology Diagram 4

2 outdoor station+ 6 indoor monitor

VM-DC 48V
(48v power supply)
Sold separately

VM-202SW
(Switch)
Sold separately

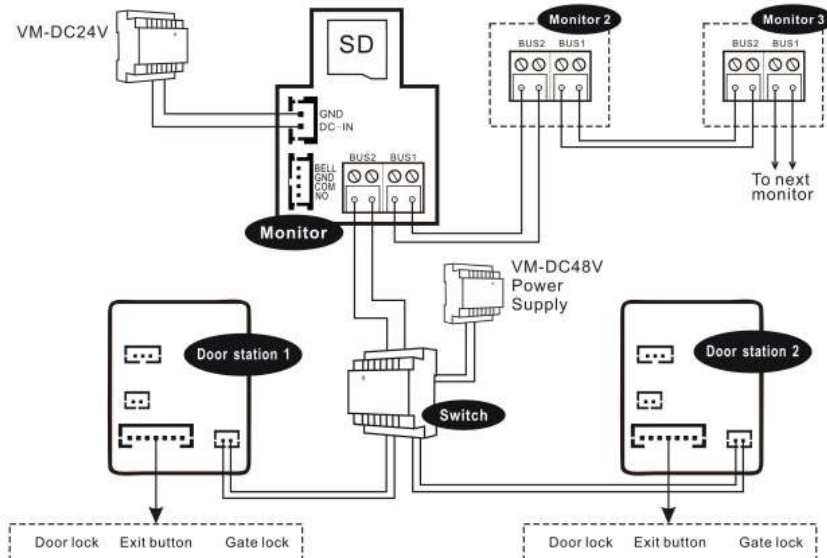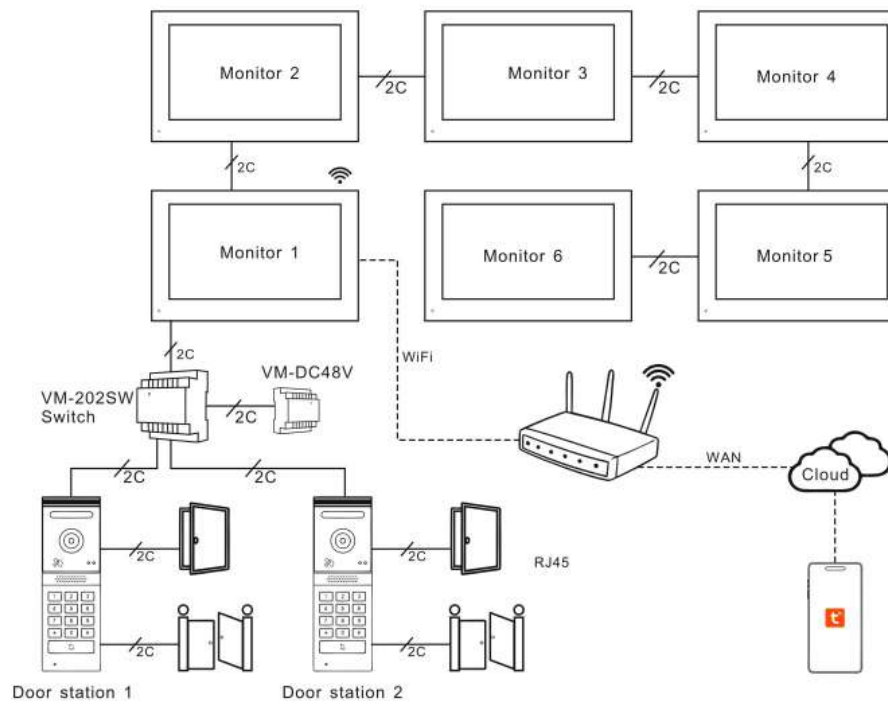

Power Supply

There are 3 types of power supply regarding the power rating.
VM-DC24V-1A (comes in kit), while others are sold separately.

Power Supply Selection Guide

Power supplies	Specs	Capacity
VM-DC 24V-1A	DC 24V/1.0A	Up to 2 Monitors
VM-DC 24V-2.5A	DC 24V/2.5A	Up to 4 Monitors
VM-DC 48V-3A	DC 48V/3.0A	Up to 6 Monitors

Switch

4-port network switch for a STAR configuration of door stations.
(Sold Separately)



VM-202SW

Kits

7" monitor

1. VM-202M (only monitor)
2. VM-202Kit (1-button door station)
3. VM-202Kit-ACS (keypad door station)


10" monitor

1. VM-202M-10W (only monitor)
2. VM-202Kit-10W (1-button door station)
3. VM-202Kit-ACS-10W (keypad door station)



Visitor Call

Standby mode

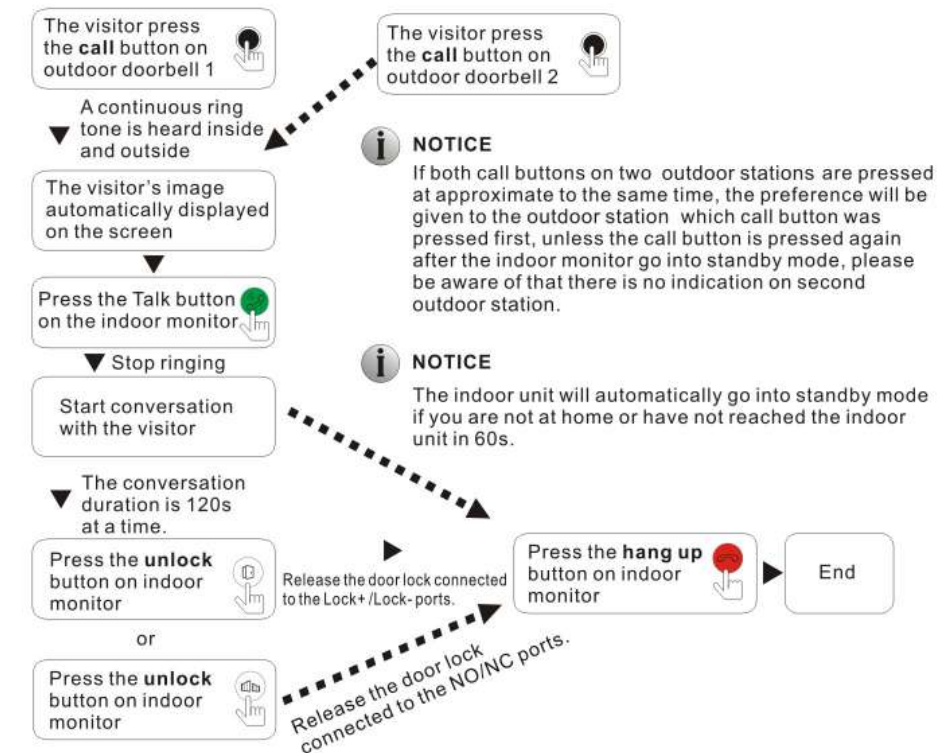

i When the option on the menu "Basic -> Record Mode" is set to "Video", in calling mode the whole process will be recorded; When the option on the menu "Basic -> Record Mode" is set to "Picture", in calling mode the first picture will be captured.

i In monitoring mode, touch the icon "📷" to start manual record, and press this button again to stop manual record. All video recording files are stored in the TF card. In monitoring mode, touch the icon "📷" to capture a frame of the video stream as a still photo by manual. Photos are stored in the TF card first, if the monitor doesn't detect the TF card, photos will be stored in the built-in memory of the monitor.

Password unlocking

Please input [password #] on outdoor station, password length 4-8 digits.

Swipe card unlocking(exit button the same)


Support cell phone NFC unlocking.

Swipe the registered user card---wait 1sec---Di sound to open the **Door lock** of outdoor station.

Swipe the registered user card---wait 3sec---Du sound to open the **Gate lock** of outdoor station.

Monitoring

Standby mode

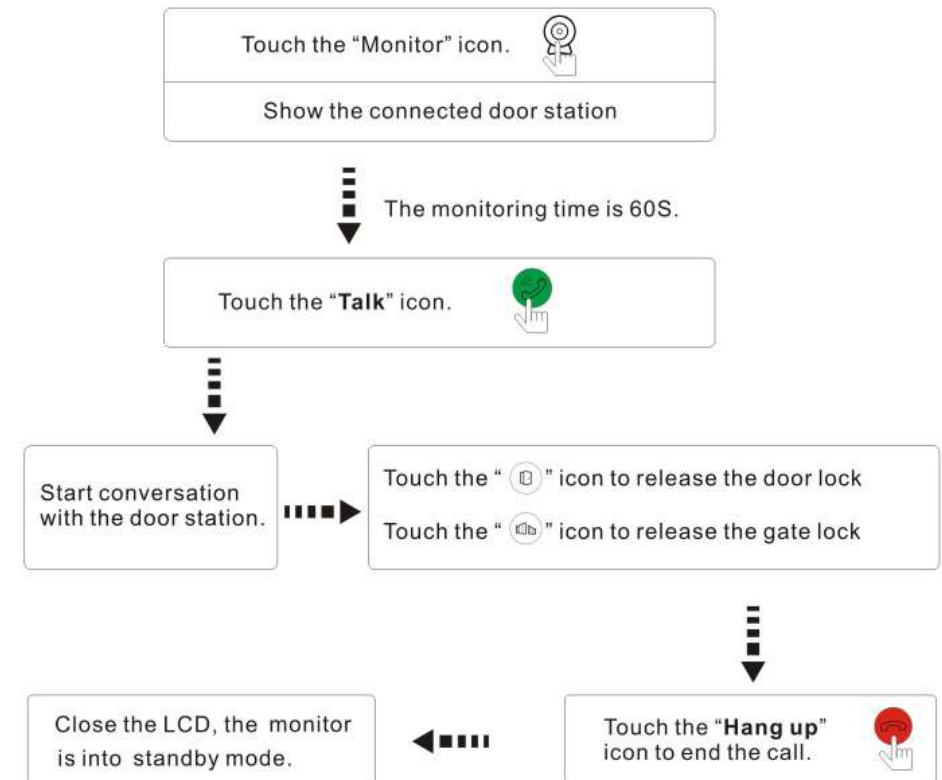

i NOTE:

1. When visitor press door station call button, system will turn off monitoring mode and switch to show door station calling image.
2. When in record mode, press "Video" or "Photo" button to start video or photo recording, press record button again to stop recording.
3. If the recording mode is set to "Video", a SD card needs to be inserted.



Monitor Introductions

Launch

When starting the monitor for the first time, a language selection interface will appear. Select the local language.



Standby mode

Display day/month/year/week/hour/minute/second and the weather information. Clock/date display on standby mode within 60 second, after disappear enter black screen mode to protect LCD.



NOTE:

When the monitor is connected to WiFi and the app is successfully added, the date, time, weather information will be synchronized by locally.

Call and monitoring

Select 1 device for monitoring



Outdoor Station Calling



Video record Doorlock Answer Hang up



Outdoor Station Monitoring



Device switch Video record Doorlock Answer Hang up

Indoor call

This function is for communication between indoor monitors. A monitor communicates with one monitor in the same time.

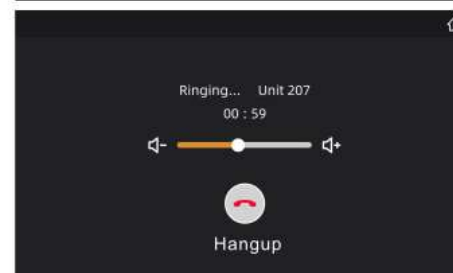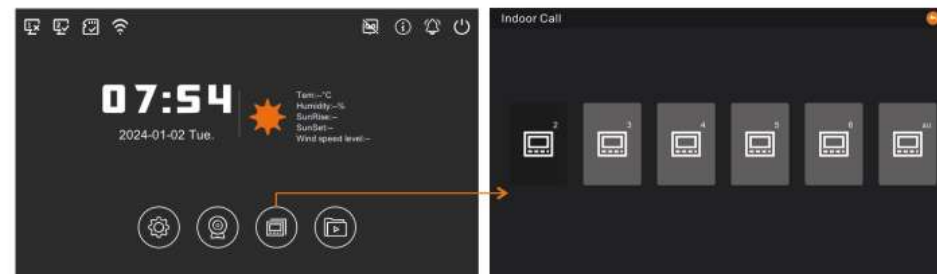

After press the monitor what you need to make a call, the following call interface will appear. Press the "Hangup" button to end the call.




History


In this menu, you can view recorded files, including answered, unanswered, human detection and alarm record. The recorded files include images and videos. The image files are in JPG format and the video files are in Mp4 format.



Video playback ↩

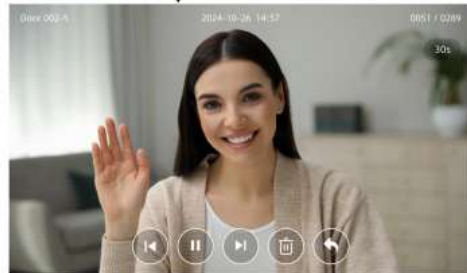

Picture playback ↩

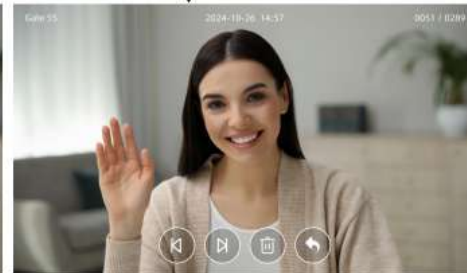

Menu settings

Basic


In this menu you can change language, auto recording, choose picture or video recording. When the auto record function is turned on, when a visitor rings the doorbell, it will automatically record or take a screenshot. Otherwise, manual recording is required. Choose the talk time with panel, there are three duration options to choose from: 60s/120s/180s



Sound

In this menu you can turn on or off screen touch tone, set ring time as 10s/20s/30s/60s, select ring mode as Standard or Customization, Ring and Call volume settings.

Note: Customized ringtones: Insert SD card - add a new folder: music - put customized ringtones in the folder [unlimited].

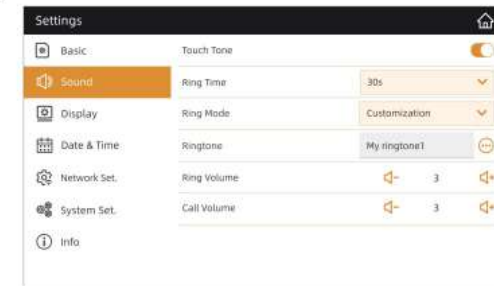


Display

In this menu you can set the screen display brightness, standby mode and screen clean functions.


Standby mode: Date&Time, Black Screen and Digital Frame. Start time: 30/60/90/120 seconds
End time : 1 / 3 / 5 minutes.

(Digital photo frame supports customized screensaver pictures; insert SD card - add a new folder: picture - folder to store the picture files need to be rotated: 1024*600px. jpg [can be up to 50 pcs].)

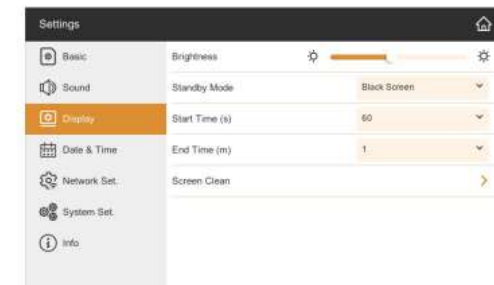

Date & Time

When the monitor is connected to internet and the app is successfully added, the date and time information will be synchronized by locally. And the Time is displayed in 24-hour format only.

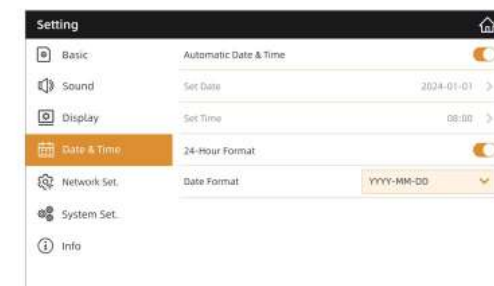


Network Set.

Wireless or Wired connection network

Wired connection mode: (it works when connect a switch.)The local network connection can be automatically or manually configured with an IP address.


Wi-Fi connection mode: (show as below)To select a correct Wi-Fi in the list and input password to connect.

Click the connected Wi-Fi name to configure if can assign IP address automatically, this function is enabled by default. If assign IP address automatically failed, please manually configure the IP address, subnet mask and default gateway.

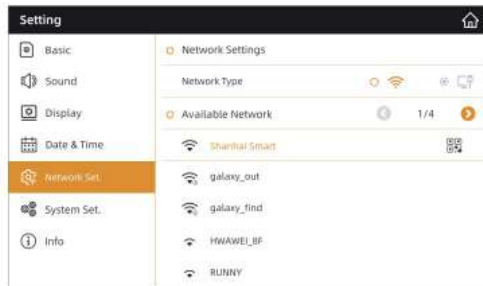

Note:
(Only supports 2.4GWiFi, 5G WiFi is not supported)

Before connecting to the network, please download Smart Life or Tuya Smart application from APP store or Google Play store. When network connect successfully, click  on the right side of the connected WIFI, will open the QR code interface. Scan the left QR code to download the APP.

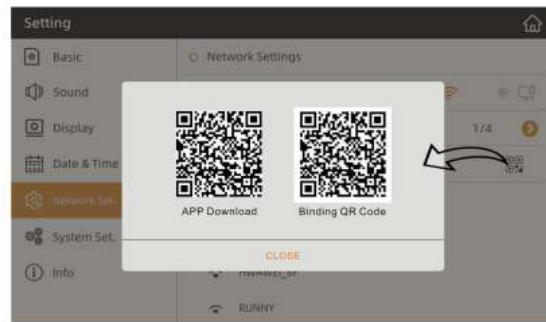

Note:

1. Router Band--This IP indoor monitor will only connect to the 2.4GHZ band. If you have a dual-band router, you must create unique SSID for the 2.4GHZ and 5GHZ bands. Prior to initiating the syncing process, make sure your device is connect to the 2.4GHZ SSID.
2. Router b/g/n --This IP indoor monitor works on 802(b/g/n) network.
3. Bring the monitor and the WIFI router within 49 feet(about 15 meters).
4. Please check if the WiFi router has the DHCP function enabled.
5. Check if the WiFi password is correct, no special characters,numbers and letters are recommended.
6. Make sure the WiFi router connected to the Internet.

Add device to APP

Step 1. After the monitor is successfully connected to WiFi.

Step 2. Connect your smart phone to the WiFi router which you want the monitor to be connected to.

Step 3. Login the Smart Life or Tuya Smart APP add device.


Method 1





Use APP Scan the QR code on the right side to bind the device. The app will automatically complete the binding process.

Method 2

- Click "Add Device" or "+";
- The APP will automatically search for devices;
- Select the device found in the search list and click "Add";
- The device will automatically add;
- Click the "Done" button to complete the device addition.

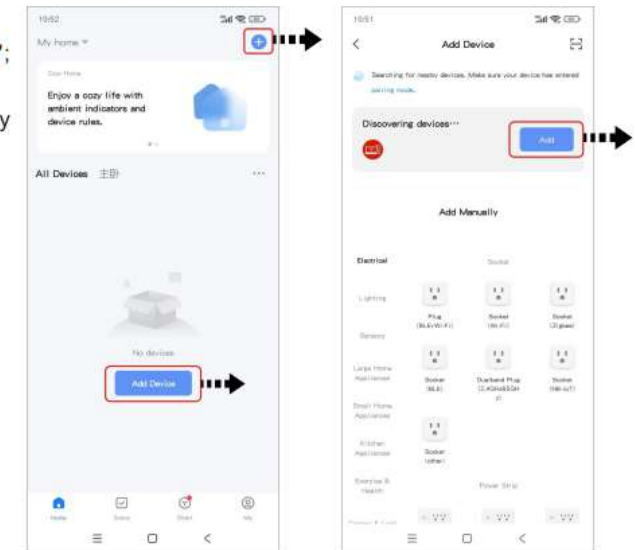

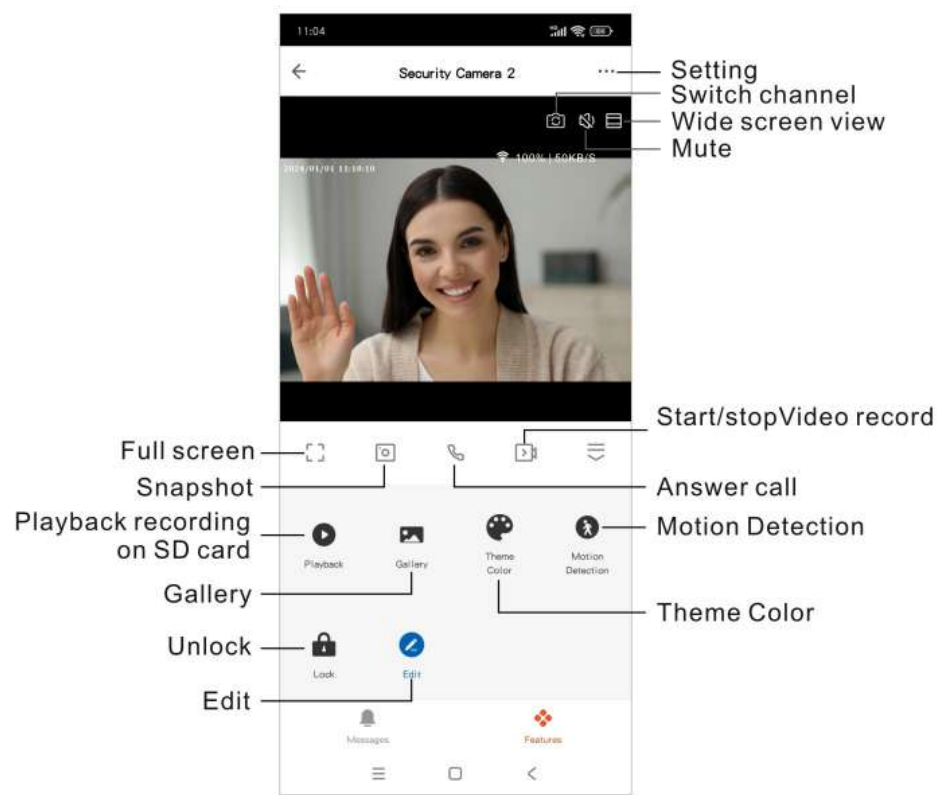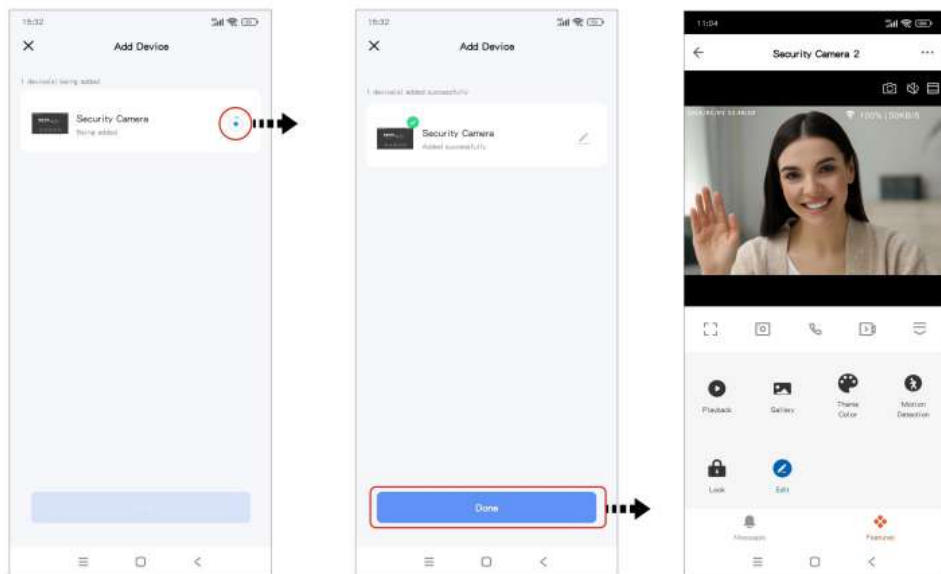


Share device via Home Management

Support up to 10 mobile phones to connect online at the same time.


Note: The shared accounts are allowed to have unlock functions.

Step 1: Create a home (Setting a Home Name)

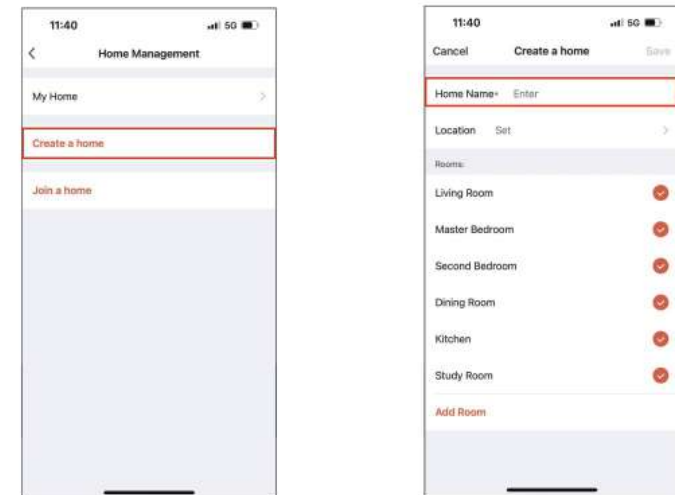

Step 2: Add member(Enter member's TUYA account)


Step 3: Choose the home and Add Device.

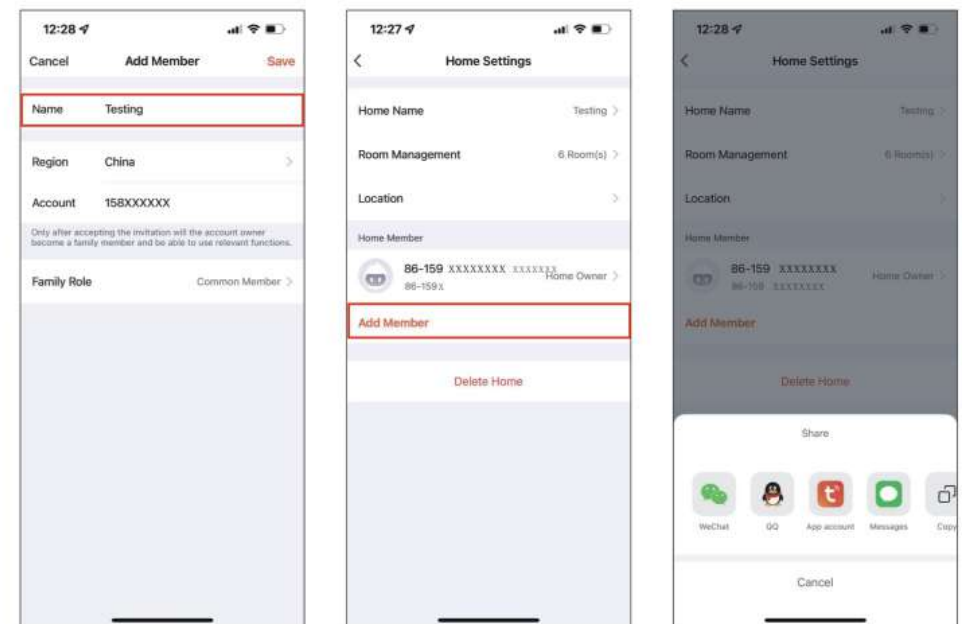

On new member's account, select the suitable home to operate the device




One-Click Unlock Mode: No need to access the device interface

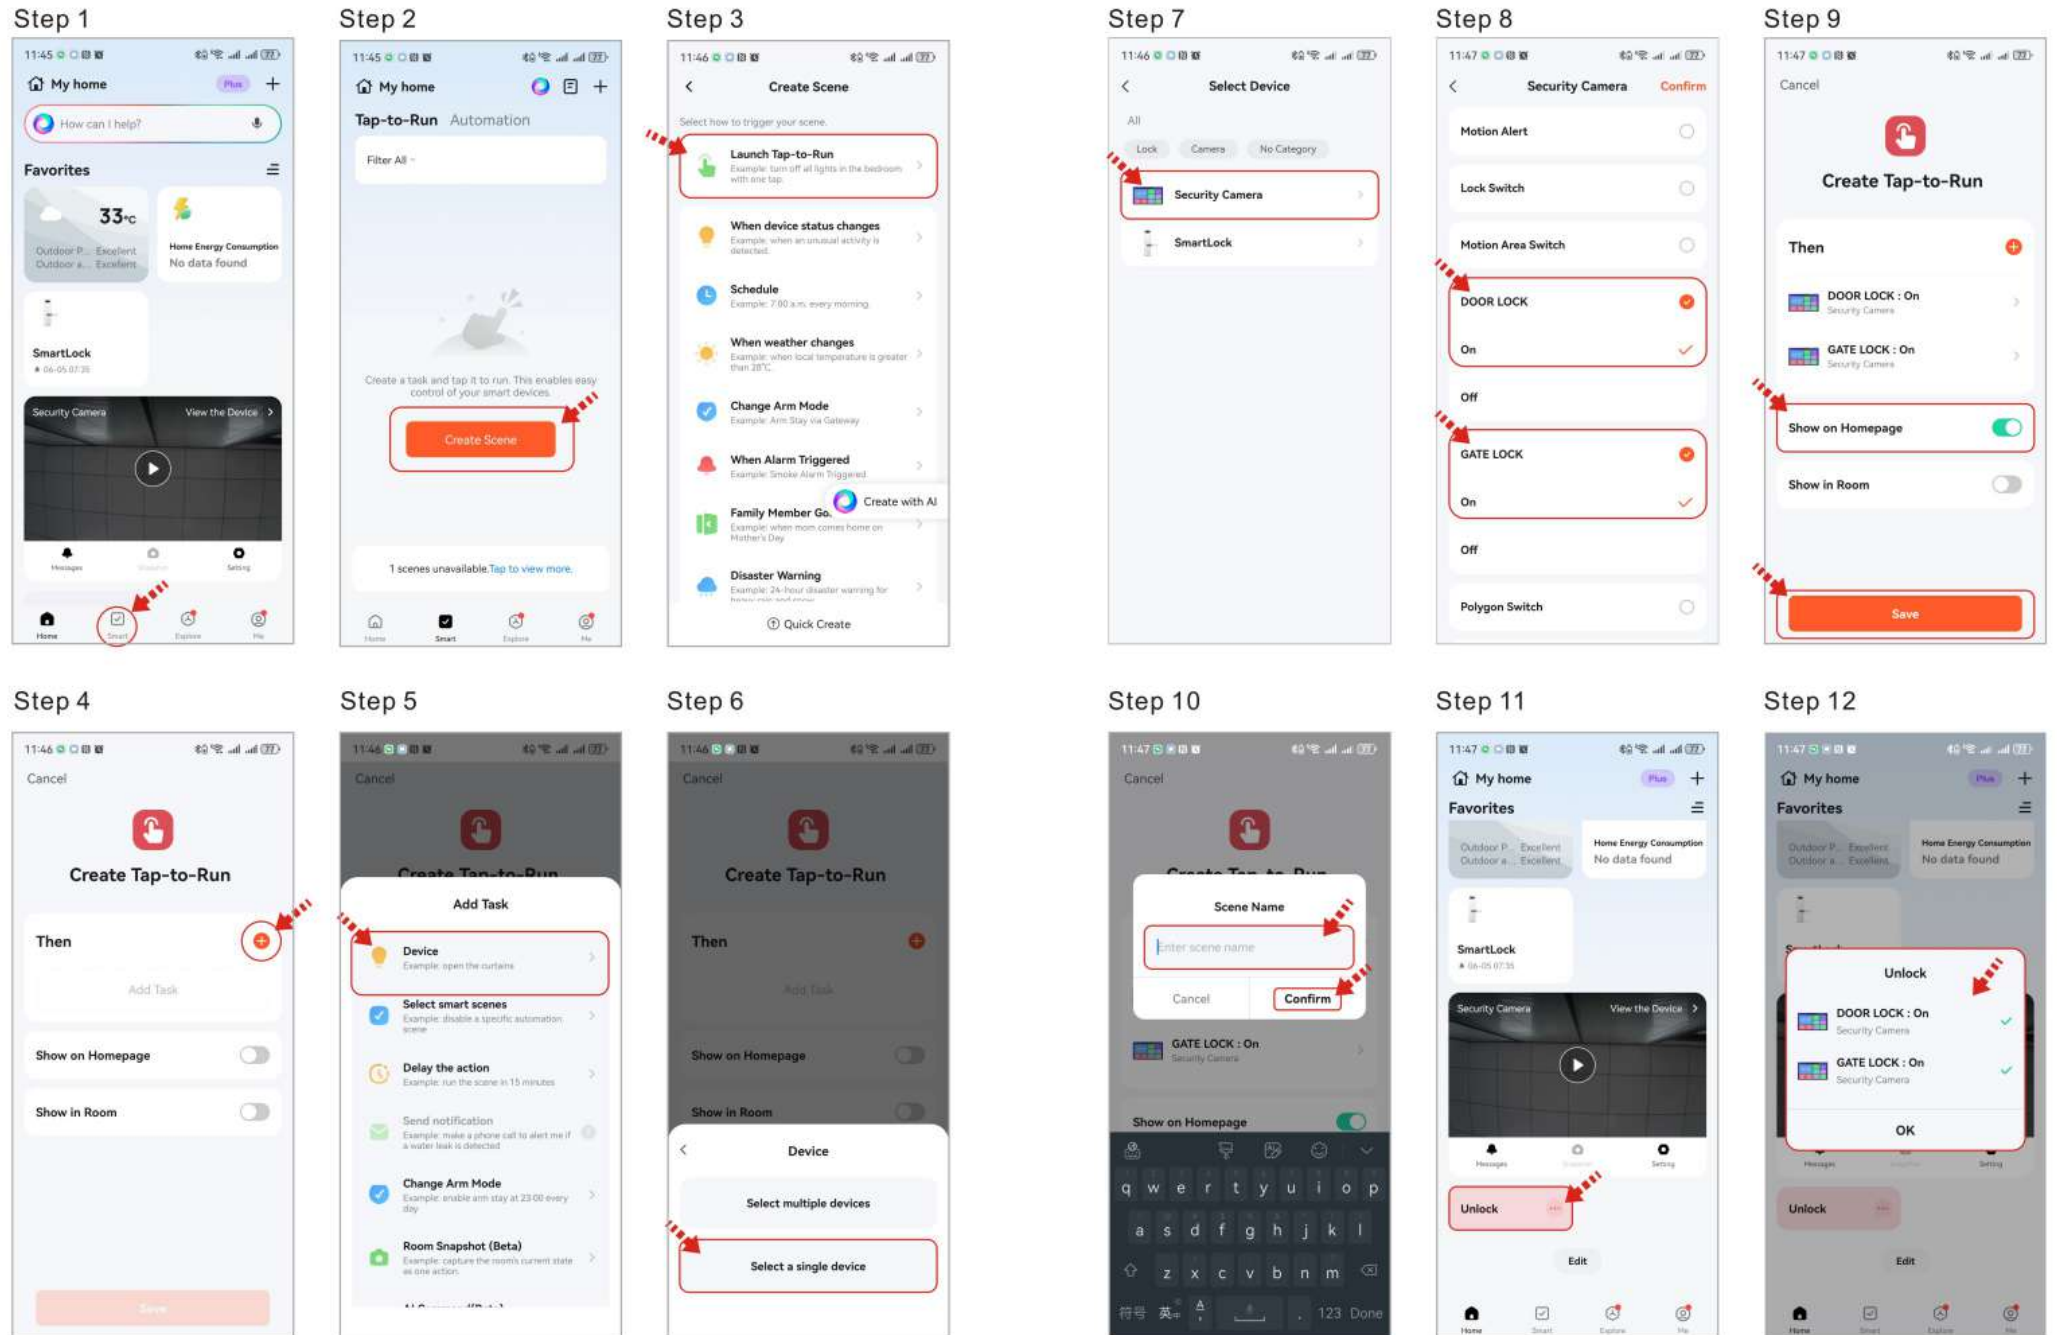

Unbind the device


Method 1

Enter the Network Set., Select the WiFi that has been connected and bound, click on "🔗". In the pop-up page, click the "unbind" button and confirm unbinding. The app will automatically unbind the device.

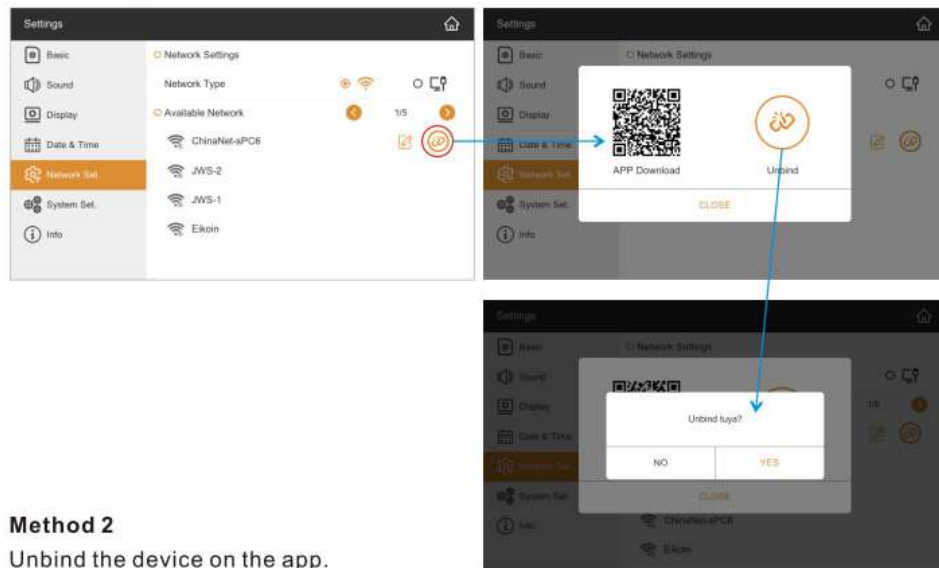

Method 2

Unbind the device on the app.

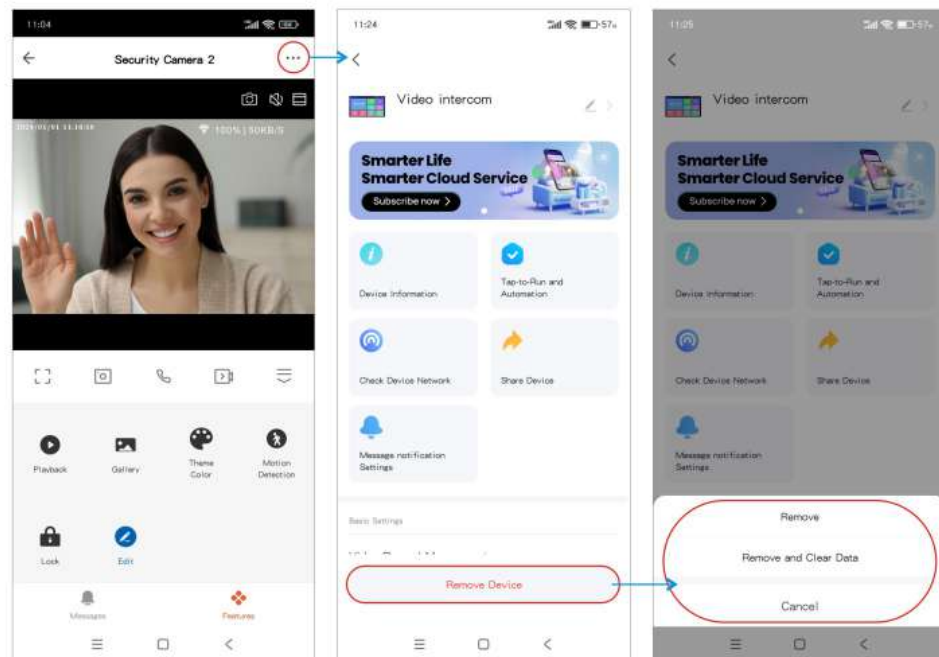


System Set.

This menu include User Settings and Engineer Settings. Need to enter the administrator password when entering.

User Settings default password is: **123456**


Engineer Settings default password is: **230901**

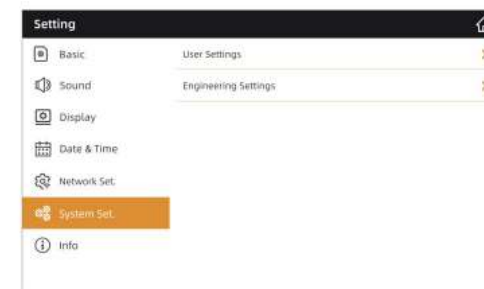

User Settings

Access control

In this menu, you can management operations on card and password.

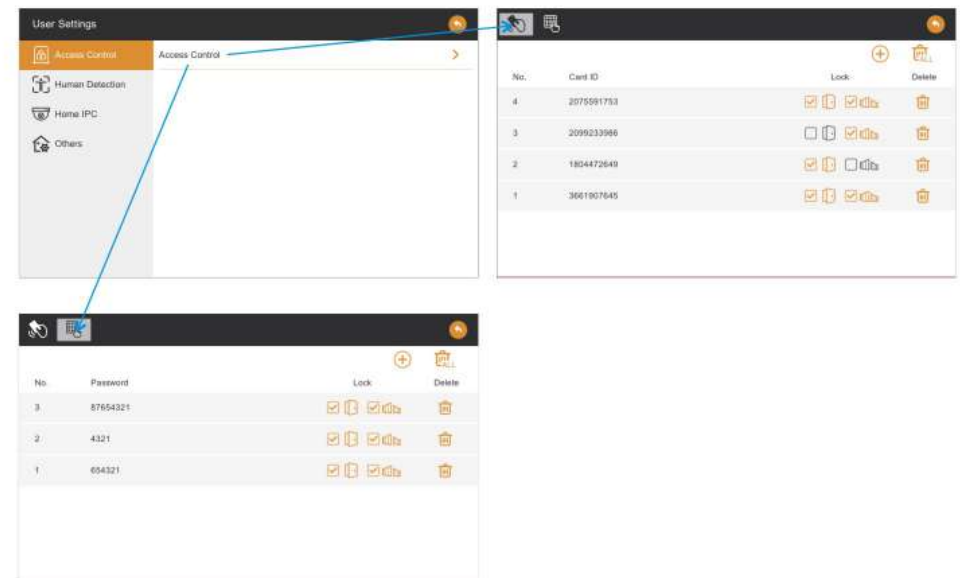

Note:

Before operating on card,password,please ensure that your outdoor station has the corresponding function,otherwise it cannot be operated.

VM-202Kit-ACS & VM-202Kit-10W-ACS has card and password function.


VM-202Kit & VM-202Kit-10W has only card function.

Password: supports virtual password unlocking (anti-peep mode). eg. xx+password or password+xx



Human Detection

It only triggers human body movements and can greatly improve the accuracy of alerts.

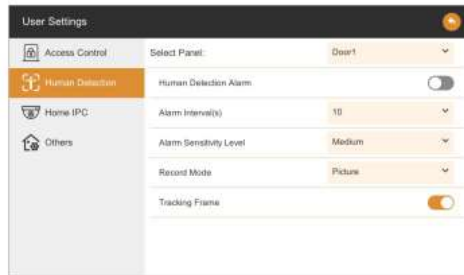


Home IPC for private house/each apartment

There are 2 ways to add a camera:

1. Automatically search for IPC in the local area network;
2. Manually add IPC with URL.

(Note: Not all IP cameras can be added, ONVIF protocol is required, max support 32pcs IPC)

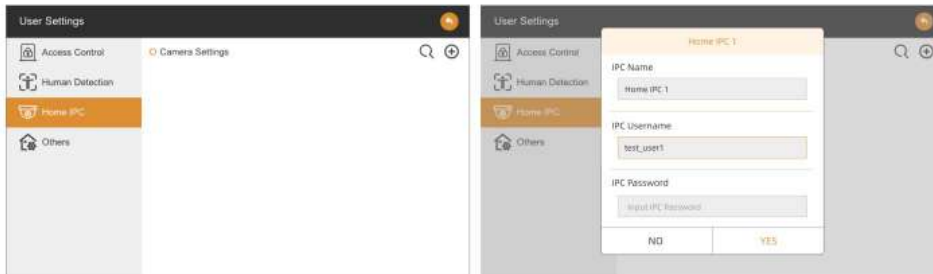


Others

Leave Message

In this menu, you can, Leave Message, Format SD card, Upgrade firmware, Modify User Passwords, Reset User Settings, etc.

Open the voice message setting interface, click icon to enable the function. Please make sure insert SD card.

Click to record the voice, click to end it, and click to play the voice. Then click [Confirm] to save the voice message settings.

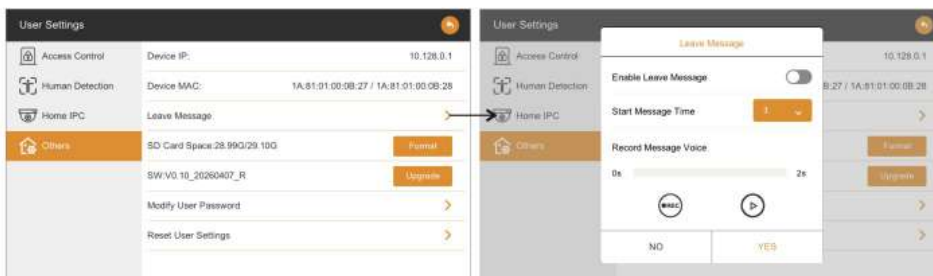

Note:

Please insert SD card. Once trigger this function, when outdoor station calling, indoor monitor will play voice message and start video recording, and save in history logs.

To upgrade firmware for indoor monitor

Open the SD card file selection screen. Select the upgrade package and click [Confirm] to upgrade.




Note:

If the software version of the device is newest or same as the software version in the SD card, the upgrade will not be entered.

OTA update on TUYA APP.

If there are any future functions update, we will publish the software on TUYA cloud. End User will receive a notification, they just click "Confirm," and the indoor monitor will update automatically. On monitoring mode---Device Update---Auto Upgrade--ON.

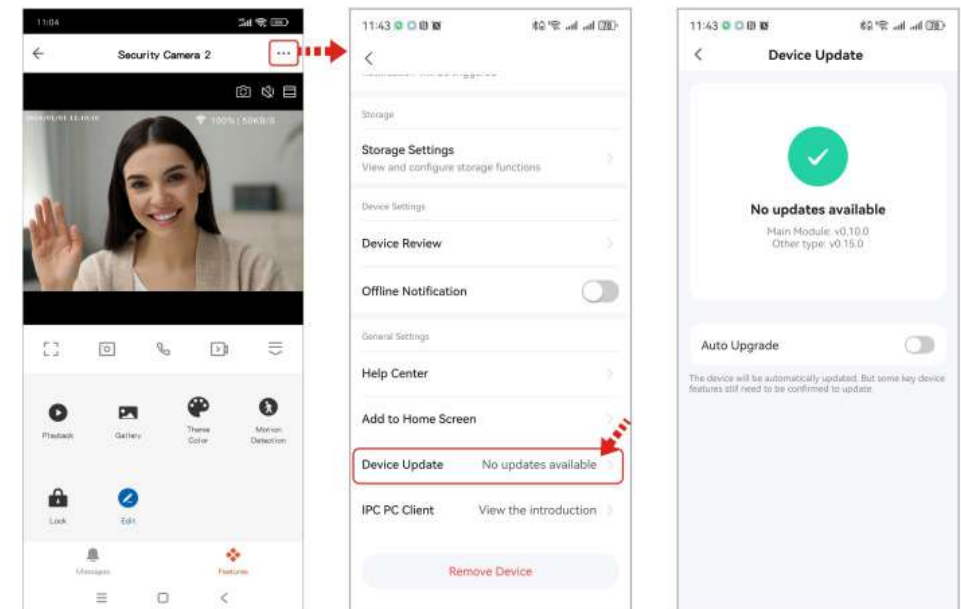

Engineer Settings

In this menu, you can set Unit No., Access Control, Panel Set., Camera Set., Others.


Unit No.

Unit No.

Villa: Unit No. 0001 (factory default)
Building: Unit No. 0001-0200.


Device No.

Devic No. 1= master indoor monitor
Device No. 2~6 = slave indoor monitor
Maximum 5 slave indoor monitors
for 1 villa/apartment.

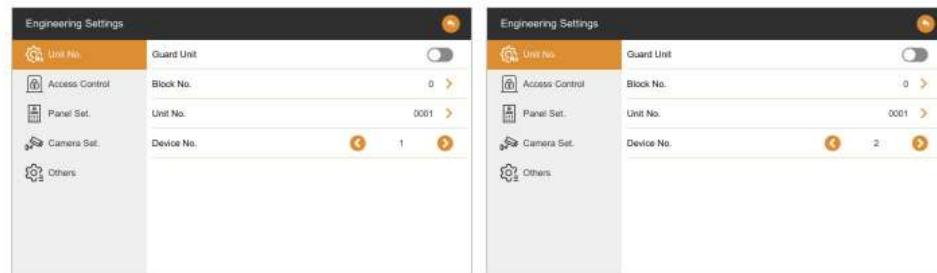

Access Control

In this menu, you can management operations on card and password.

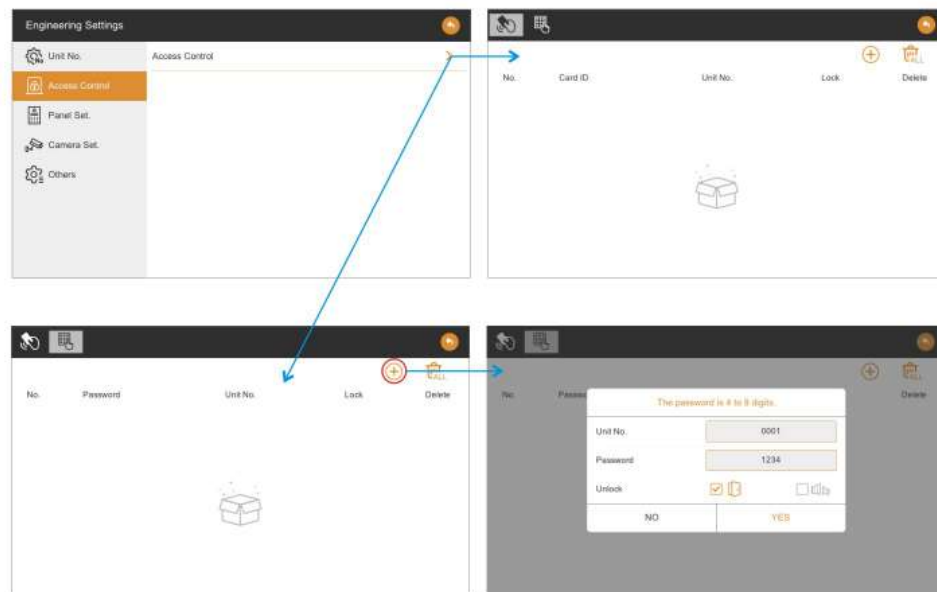

Note: When adding a password, need to enter the unit number.

Panel Set.

To set address and parameters of outdoor station.(Door unlock delay 1sec. and Gate unlock delay 3sec.default.) It including firmware upgrade also for outdoor station.




Camera set.in public areas

- 1.Click 🔍 to search IPC in a same LAN auto. and add to list.
- 2.From IPC list, click ⓘ to edit user name, user password and configuration success to show ✅.
- 3.Click 🗑️ to delete IPC.

3 ways to add IPC in pubic areas.

1).Auto Load CCTV List


1. Click ⚙️ to pop-up 【more config】 , 【Auto load CCTV List】 default ON.
2. To load or set cctv list from Door1 or Door2.
3. 【Export】 to get public IPC list which configured with indoor screen export to SD card. 📄 MonitorList.json
4. 【Import】 copy public IPC list from SD card to outdoor station. 📄 MonitorList.json
5. 【Auto load CCTV List】 OFF, to add IPC manual, click 【 + 】 to pop-up to input camera name and URL, add success to show 【 ✅ 】 .

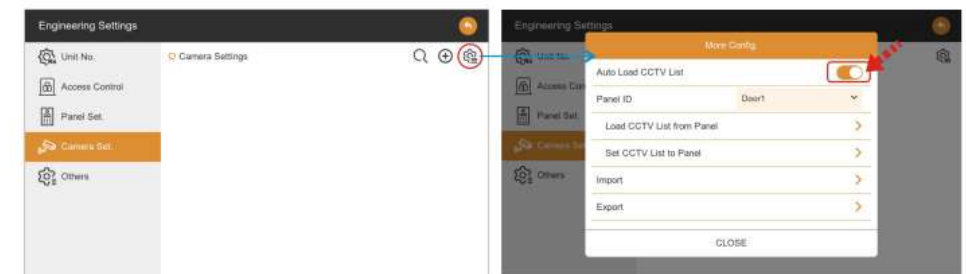


2). Auto search IPC in the local area network.

- 1.Click 🔍 to search IPC in a same LAN auto. and add to list.
- 2.From IPC list, click ⓘ to edit user name, user password and configuration success to show ✅.
- 3.Click 🗑️ to delete IPC.



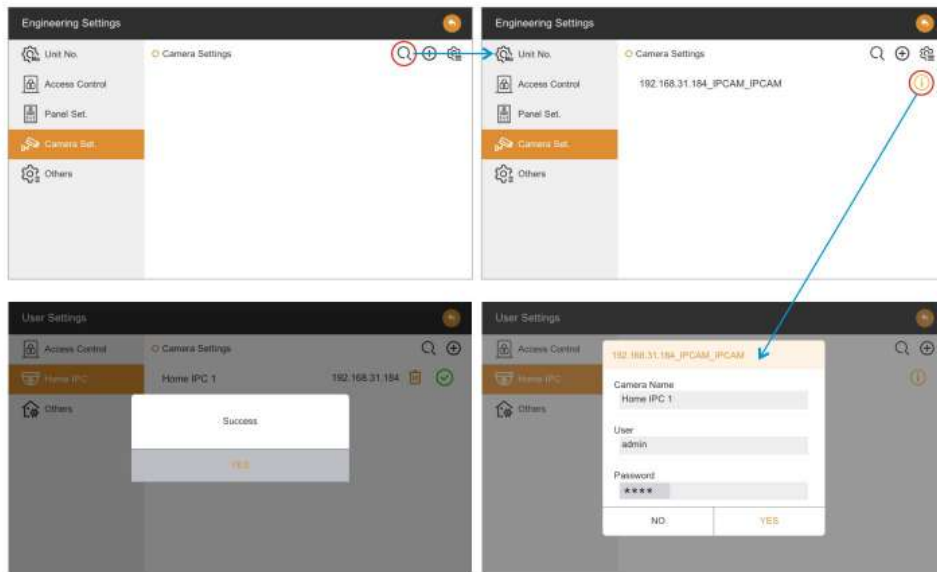

3).Manually add IPC with URL.

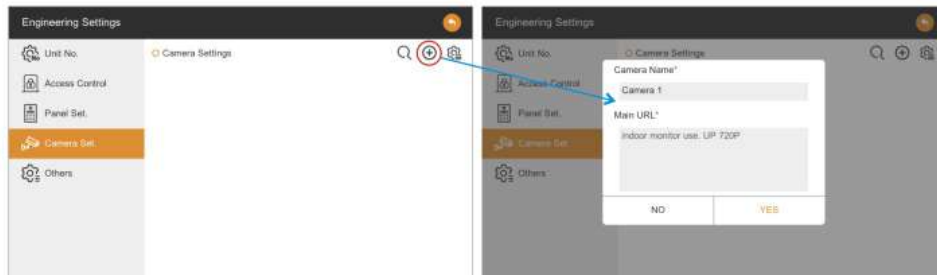


Note: Not all IP cameras can be added, Onvif protocol is required.

Others


To change User password or Engineering password, Factory reset and custom function.

Factory Reset

Restore to factory default.

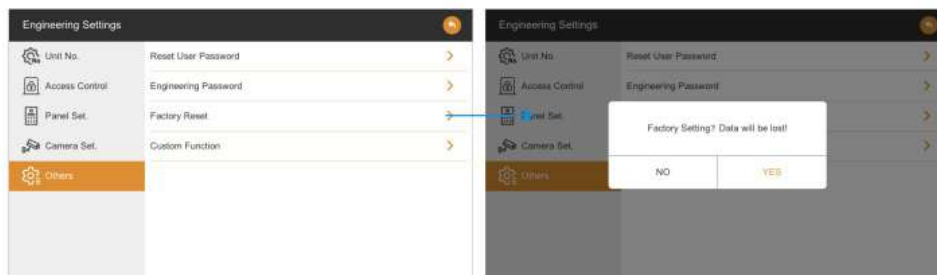

Custom Function

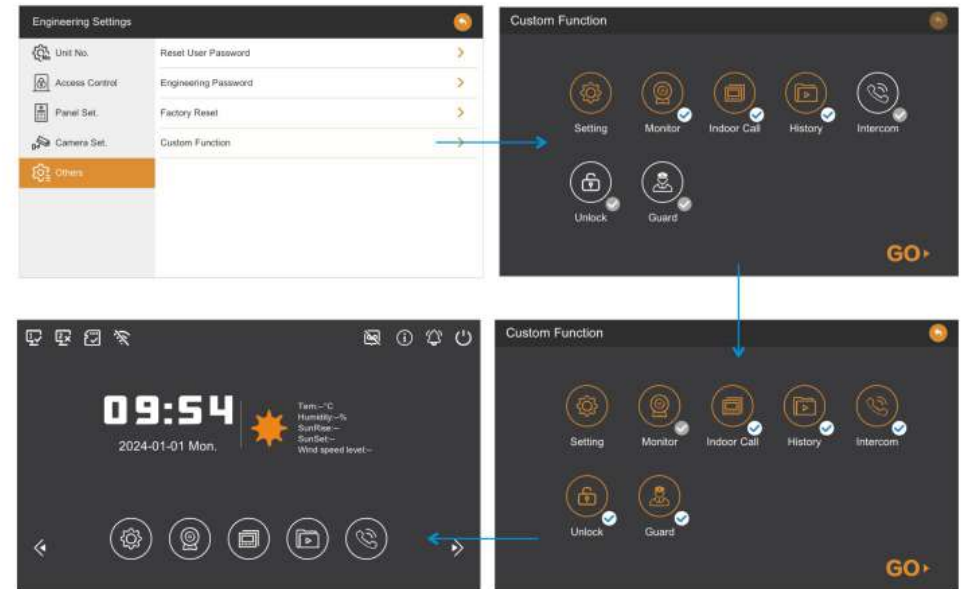

More flexible setting of work modes and corresponding function icons displayed on the homepage.
eg. for door lock which connected with indoor monitor.





NEW ZEALAND

Unit 1, 13 Beatrice Tinsley Cres
Rosedale, Auckland 0632
0800 322 269 | www.accessx.co.nz

AUSTRALIA

Level 9, 140 Bourke Street
Melbourne, VIC 3000
1800 284 339 | www.accessx.com.au